
Up/Down Counter/Timer

123456


DIN W72×H36mm of counter/timer with indication only

Features


- •Upgraded counting speed: 1cps/30cps/2kcps/5kcps
- •Application of Up/Down input mode
- •Selectable Up/Down indication of display value
- •Wide range of input power supply: 100-240VAC 50/60Hz, 12-24VAC/DC
- •Selectable Counter or Timer function by internal DIP switch
- •Selectable time ranges
- •Built-in Microprocessor

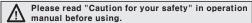



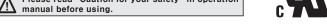

Ordering information

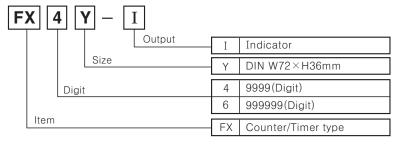

Specifications

Model		FX4Y-I	FX6Y-I		
Digit		4	6		
Digit size		W8×H14mm W4×H8mm			
Power supply		100-240VAC 50/60Hz, 12-24VAC/DC(Option)			
Allowable voltage range		90 to 110% of rated voltage			
Power consumption		Approx. 4.5VA(240VAC 60Hz), Approx. 4.5VA(24VAC 60Hz), Approx. 2.5W(24VDC)			
Max. coun	ting speed	Selectable 1cps/30cps/2kcps/5kcps by internal DIP switch			
Min. input	INHIBIT input	Min. 20ms			
signal width	RESET input	IVIIII. Z	OlliS		
Input	CP1, CP2 input	No voltage input Impedance at short-circu	iit : Max. 470Ω, Residual voltage at		
Input	RESET input	short-circuit : Max. 1VDC, Impedance at open-circuit : Min. $100 \mathrm{k}\Omega$			
Memory protection		10 years(When using non-volatile semiconductor memory)			
Eexternal power		12VDC±10% 50mA Max.			
Insulation resistance		Min. 100MΩ (at 500VDC megger)			
Dielectric strength		2000VAC 50/60Hz for 1 minute			
Noise	AC type	±2kV the square wave noise(pulse width: 1μs) by the noise simulator			
strength	DC type	$\pm 500 \mathrm{V}$ the square wave noise(pulse width: $1 \mu \mathrm{s}$) by the noise simulator			
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1hour			
VIDIALIOII	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes			
Shock	Mechanical	300m/s² (Approx. 30G) in X, Y, Z directions for 3 times			
SHOCK	Malfunction	100m/s ² (Approx. 10G) in X, Y, Z directions for 3 times			
Ambient temperature		-10 to 55℃ (at non-freezing status)			
Storage temperature		-25 to 65℃ (at non-freezing status)			
Ambient humidity		35 to 85%RH			
Approval		c PA us			
Unit weight		AC type:Approx. 126g, DC type:Approx. 130g AC type:Approx. 128g, DC type:Approx. 132g			

Photo electric sensor

(B) optic sensor

Door/Area sensor

Proximity sensor

Pressure sensor

Rotary encoder

Connector/ Socket

(H) Temp.

(I) SSR/ Power controller

(J) Counter

(K) Timer

(∟) Panel meter

Tacho/ Speed/ Pulse meter

(N) Display unit

Sensor controller

Switching power supply

(Q) Stepping motor & Driver & Controlle

Graphic/ Logic panel


(S) Field network device

Production stoppage models & replacement

Autonics J - 34

FXY Series

■ Connections

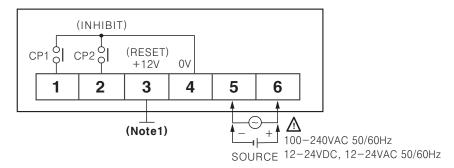

****(Note 1)** It can be selected RESET or sensor power(+12VDC 50mA) by internal PIN operation.(Refer to J-39) ****CP1**, CP2: Input signal terminals when using as counter.


※INHIBIT(CP2): Time Hold terminal when using for timer(Connect switch to ②+④ from the external.)

*Operated by a Power ON Start method when it is used as a timer.


■Input connections

OUsing for no-voltage input(NPN)


Solid-state input(Standard sensor : NPN output type sensor)

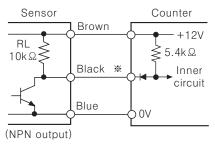

*CP1, CP2(INHIBIT), RESET input

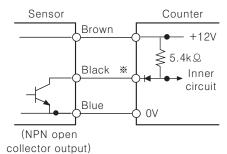

Contact input

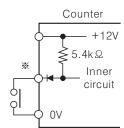


**Please select the counting speed as 30cps when using for counter.

OUsing for voltage input(PNP)

FXY series is for no-voltage input type, it is not available to count applying DC voltage from the external. For using PNP type sensor, please use as the following to count.


●PNP output type sensor

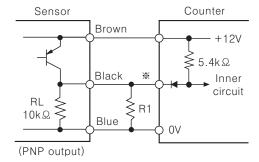

•Please set R1 value to make the composed resistance of RL + R1 as Max. 470kΩ is an impedance for short-circuit.

***CP1**, CP2(INHIBIT), RESET input

•PNP open collector output type sensor

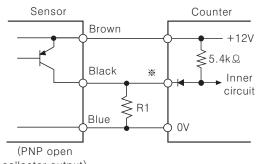

collector output)

**In case of PNP open collector output type sensor, please connect lower than $470\,\Omega$ of R1 to input terminal before using.

J-35 Autonics

Up/Down Counter/Timer

■ Counting method


Be careful to select sensor because the counting method of NPN output type sensor is different from PNP output type sensor.

●NPN output type sensor


: When the sensor is changed from OFF to ON, it counts.

●PNP output type sensor

: When the sensor is changed from ON to OFF, it counts.

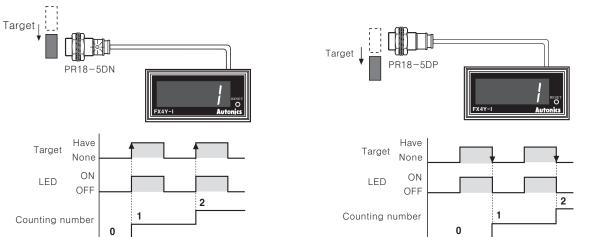


Dimensions

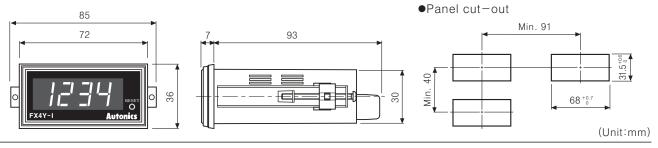


Counting operation of indication type(Counter)


Up mode

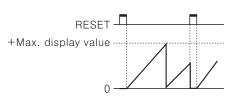


●Down mode

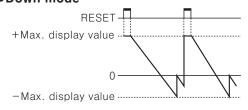

●Up/Down-A, B, C mode

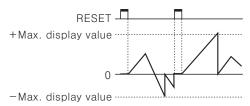


●Up/Down-D, E, F mode

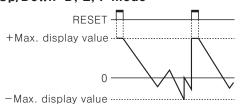


Counting operation of indication type(Timer)

●Up mode

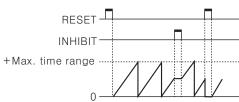

●Down mode

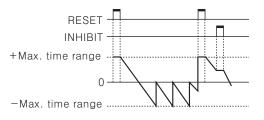

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/ Socket

(H) Temp. controller

(I) SSR/ Power controller

(J) Counter

(K) Timer

(L) Panel meter

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply

(Q) Stepping motor & Driver & Controller


(R) Graphic/ Logic panel

(S) Field network device

(T) Production stoppage models & replacement

Autonics J-36

■ Description of inner DIP switches

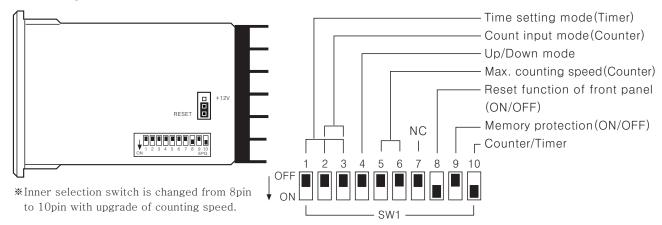

●Up/Down mode

	SW1	Function
4	OFF ON	Up mode
4	OFF ON	Down mode

Reset function of front panel(ON/OFF)

SW1		Function		
8	OFF ON	Disable the front panel reset function		
	OFF ON	Enable the front panel reset function		

Memory protection (ON/OFF)

SW1		Function		
9	OFF ON	Enable the memory protection		
9	OFF ON	Disable the memory protection		

●Counter/Timer

	SW1	Function	
10	OFF ON	Timer	
10	OFF ON	Counter	

Max. counting speed

SW1	CP1, CP2		
5 6 OFF ON	1cps		
OFF ON	30cps		
5 6 OFF ON	2kcps		
5 6 OFF ON	5kcps		


■Time setting mode(Timer)

SW1	4Digit	6Digit	SW1	4Digit	6Digit
A 1 2 3 OFF ON	99.99sec.	99999.9sec.	1 2 3 OFF ON	999.9min.	99999.9min.
B 1 2 3 OFF ON	999.9sec.	999999sec.	1 2 3 OFF ON	99hour 59min.	99hour 59min 59sec.
OFF ON	9999sec.	99min. 59.99sec.	1 2 3 OFF ON	999.9hour	9999hour 59min.
D 1 2 3 OFF ON	99min. 59sec.	999min. 59.9sec.	H 1 2 3 OFF ON	9999hour	99999.9hour

J-37 Autonics

Up/Down Counter/Timer

■Input mode(Counter)

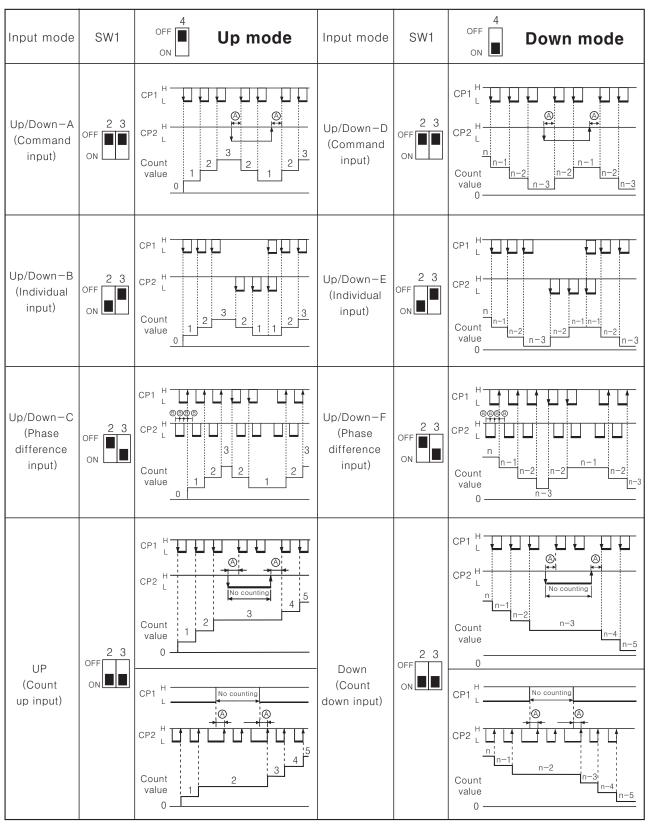

※∅: Over min. signal width, ®: Over 1/2 of min. signal width.

If the signal width of 0 or 0 is less than min. signal width, ± 1 of count error is occured.

%n: + max. display value(FX4Y-I: 9999, FX6Y-I: 999999)

(B)
Fiber
optic
sensor

(C)
Door/Area
sensor

(D)
Proximity
sensor

(E)
Pressure
sensor

(F)
Rotary
encoder

(G)
Connector/
Socket

(A) Photo electric sensor

(J) Counter

Power controller

Temp.

(I) SSR/

(K) Timer

(L)

Panel meter (M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply (Q) Stepping

(Q) Stepping motor & Driver & Controller (R) Graphic/

Logic panel (S) Field network

Field network device

Production stoppage models & replacement

Autonics J-38

Proper usage

OReset


Reset

When selecting a reset input/output mode, please apply the external reset or manual reset signal.

If it is not reset, it is operated as the prior mode.


•Reset signal width

It is reset perfectly when the reset signal is applied for **min. 20ms** regardless of the contact input & solid-state input.

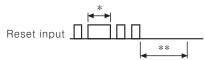

- *In case of a contact reset, it is reset perfectly if the ON time of reset signal is applied for min. 20ms even though a chattering is occured.
- **Signal input (CP1, CP2) is possible if there is no reset input for min. 50ms after reset input.


OMin.signal width

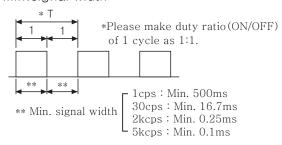

OMax. counting speed

This is a response speed per 1 sec. when the duty ratio (ON:OFF) of input signal is 1:1.

If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed will getting slower against input signal. And one of ON width and OFF width is under min. signal width, this product may not response.

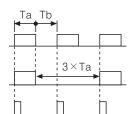


Ta(ON width) and Tb(OFF width) need to be over min. signal width.

When duty ratio is 1:3, the max. counting speed will be 1/2 from the rated spec.


It can not respond if it is smaller than min. singal width(Ta).

ODetach the case from body


While pushing the Lock part with with driver to the front, push the terminal block.

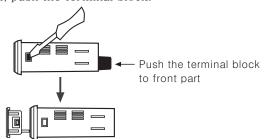


Ousing switching pin of Reset / +12V

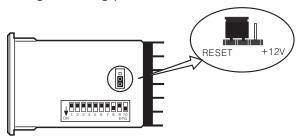


•When using terminal 3 for external reset terminal

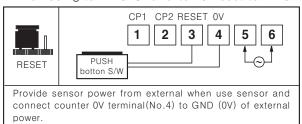


•When using terminal 3 for sensor power terminal

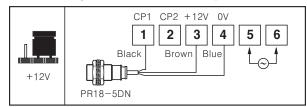

◎INHIBIT[For timer]

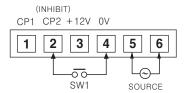

- •It becomes the INHIBIT mode when SW1 turns on. (Time Hold)
- •When power is applied, it starts to progress and INHIBIT mode is used to stop the time is under the progress at the moment.
- •When SW1 is OFF, timer starts to progress again.

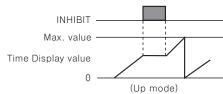

©Power

The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.



J-39 Autonics