Optical laser distance sensors









0.3 ... 10m





- Measurement range up to 10000mm at 90% diffuse reflection
- Reflection-independent distance information up to 6000mm
- Infrared laser diode with laser class 1
- Switchable laser alignment aid with pilot laser beam
- Highly insensitive to extraneous light
- Analog current or voltage output
- PC/OLED display and key pad for configuration
- Measurement value is indicated in mm on OLED display
- Measurement range and mode adjustable















Accessories:


(available separately)


- Mounting systems
- Cable with M12 connector (K-D ...)
- Configuration software

Dimensioned drawing






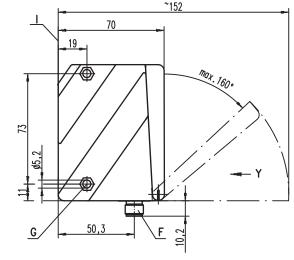


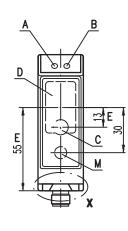

- Indicator diode green
- В Indicator diode yellow
- С Transmitter
- D Receiver
- Е Optical axis
- Device plug M12x1
- G Countersinking for SK nut M5, 4.2mm deep
- OLED display
- Reference edge for the measurement (cover glass)
- Key pad
- Green and yellow indicator diodes
- Transmitter / Pilot beam

Electrical connection





Specifications

Optical data

Measurement range 300 ... 10000 mm (90% diffuse reflection), 300 ... 6000mm (6 ... 90 % diffuse reflection)

Resolution 3mm Light source Wavelength laser

785nm (infrared light), laser alignment aid: 658nm (visible red light)

divergent, 2x6mm² at 5m Light spot

Error limits (relative to measurement range end value 6000mm)

± 0.5 % ± 5 mm ± 10 mm Absolute measurement accuracy 1 Repeatability 2) B/w detect. thresholds (6 ... 90% rem.) Temperature drift ± 1.5 mm/K

Timina

"Fast" operating mode: Measurement time 2.8ms

"Standard" operating mode: "Precision" operating mode: 20_{ms}

100ms (factory setting)

≤ 300 ms

Electrical data

Delay before start-up

Operating voltage U_B Residual ripple ...C6/V6 18 ... 30VDC (incl. residual ripple)

≤ 15% of U_B Open-circuit current ≤ 150mA

Switching output

Signal voltage high/low

push-pull switching output $^{3)}$, PNP light switching, NPN dark switching \geq (U_B-2 V)/ \leq 2V voltage 1 ... 10V / 0 ... 10V / 1 ... 5V / 0 ... 5V, R_L \geq 2k Ω current 4 ... 20mA, R_L \leq 500 Ω Analog output ...V6

...C6

Indicators teach-in on GND

Green LED continuous light ready no voltage

Yellow LED continuous light object within range / switching output

object out of range / switching output

Mechanical data metal housing

Housing diecast zinc glass 380g Optics cover Weight Connection type M12 connector

Environmental data

-20°C ... +50°C / -30°C ... +70°C

Ambient temp. (operation/storage) Protective circuit 4) 1, 2, 3 VDE safety class 5) II, all-insulated IP 67, IP 69K ⁶⁾
1 (acc. to EN 60825-1)
IEC 60947-5-2 Protection class Laser class Standards applied

1) For 300 ... 6000 mm measurement range, luminosity coefficient 6 % ... 90 %, "Precision" operating mode, floating average calculation taking 30 measurement values into account, at 20°C after 20 min. warmup time, medium range of U_B , measurement object $\geq 50 \times 50 \text{ mm}^2$

Same object, identical environmental conditions, "Precision" operating mode, floating average calculation taking 30 measurement values into account, after 20 min. warmup time, measurement object $\geq 50 \times 50 \, \text{mm}^2$

The push-pull switching outputs must not be connected in parallel

1=transient protection, 2=polarity reversal protection, 3=short circuit protection for all outputs Rating voltage 250VAC, with cover closed

IP 69K test acc. to DIN 40050 part 9 simulated, high pressure cleaning conditions without the use of additives. Acids and bases are not part of the test

Tables

Diagrams

Remarks

Approved purpose:

This product may only be used by qualified personnel and must only be used for the approved purpose. This sensor is not a safety sensor and is not to be used for the protection of persons.


Order quide

| | Designation | Part No. |
|---|--------------------|----------|
| Analog current output Current output, teach input, 1 push/pull output | ODSIL 96B M/C6-S12 | 50109302 |
| Analog voltage output Voltage output, teach input, 1 push/pull output | ODSIL 96B M/V6-S12 | 50109303 |

2010/09 ODSIL 96B M/... - 01

Optical laser distance sensors

Analog output: characteristic curve for factory setting

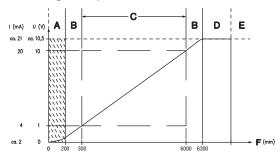

Factory setting

- A Area not defined
- B Linearity not defined
- C Measurement range
- D Object present
- E No object detected
- F Measurement distance

Measurement mode and measurement filter

The user can individually adapt the measurement system of the ODSIL 96B to various applications. By configuring the measurement mode and measurement filter, either a higher measurement accuracy or, alternatively, faster measurements can be achieved. Configuration can be performed either directly on the sensor or with the ODS 96B configuration software.

Optimization of measurement mode

In the Application menu, you can set 3 different measurement filters.

| Menu setting | Effect |
|---|---|
| Application -> Measure Mode -> Precision | high accuracy, measurement time of individual measurement: 100ms |
| pplication -> Measure Mode -> Standard exact and fast, measurement time of individual measurement: 20ms | |
| Application -> Measure Mode -> Speed | fast measurement, measurement time of individual measurement: 2.8ms |

Optimization of measurement filter

To achieve more precise measurement values, a measurement filter can be adjusted in addition to the measurement mode. In most cases, the use of a floating average results in a reduction in the variance of the measurement values.

To use this, select the menu setting **Application** -> **Measure Filter** -> **Averaging**.

The number of measurement values to be taken into account can be set to a value between 1 ... 99 via menu setting Application -> Measure Filter -> Averaging -> Measurem. Count.



The measurement value display on the OLED display can be used to assess the efficiency of the selected measurement mode and measurement filter in the application. The update rate of the OLED display is always 2Hz. The ODS 96B configuration software provides identical functionality.

Factory setting of measurement mode:

On delivery, the sensor is preset so that measurement values with the maximum possible accuracy are achieved:

Measurement mode Precision.

Reset to factory settings

Press the _ button while switching on the device to reset the configuration of the ODSIL 96B to the state upon delivery from the factory.

Press the $\hfill \Box$ button again to reset all parameters to the factory settings. All settings made previously are permanently lost.



Press lacktriangledown and the ODSIL 96B returns to measurement operation without resetting the parameters.

You can also use the menu or the configuration software to reset to factory settings. For this purpose, select menu item Settings -> FactorySettings -> Execute.

The ODS 96B configuration software can also be used to reset the ODSIL 96B to factory settings.

Teach-in of switching outputs, analog characteristic output curve and Preset


∧ Notice.

If you have changed the factory setting for teaching under Input Mode, activate on the OLED display the menu item

Input -> Input Mode -> Teach.

To teach, proceed as follows:

- 1. Position measurement object at the desired distance.
- 2. The respective teach function is activated on the teach input for the duration of a level change **T** (see graphical representation). The level conditions describe the levels with menu setting **Input** -> **Input Mode** -> **Input polarity** -> **Active High** +24**V** (factory setting).



| Teach function | Duration T |
|--|------------|
| Switching output Q1 | 20 80ms |
| Distance value for start of measurement range = 1V or 4mA at analog output | 220 280ms |
| Distance value for end of measurement range = 10V or 20mA at analog output | 320 380ms |

∧ Notice!

If the inactive level is continuously applied on the teach input, the teach input is locked.

For menu setting Input -> Input Mode -> Input polarity -> Active Low +0V, inverted input signals are used during teaching.

Preset Teach-In

On the OLED display, activate for this purpose menu item *Input -> Input Mode -> Preset*.

The preset teach occurs in a manner analogous to that for the teach-in for switching output Q1.

ODSIL 96B M/... - 01 2010/09